




Screen Installation Guide


Materials and Hardware

Included Hardware

Angle brackets (8)

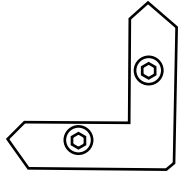

Wall cleat

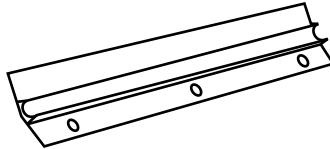

Hex key




Fabric installation tool




Screen materials


Horizontal frame pieces (2)

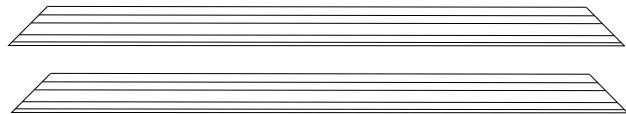

Vertical frame pieces (2)

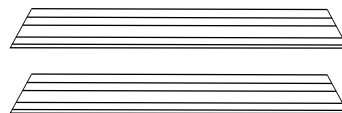

Screen fabric roll

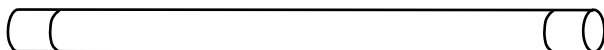

1


Frame Assembly

1

Install The Angle Brackets

In one of the vertical frame pieces, slide in the angle brackets, two at the top and two at the bottom.

Repeat with the other vertical frame piece.

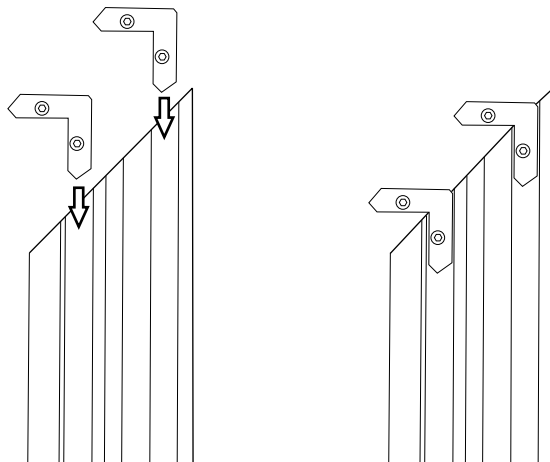


2

Attach The Frame Pieces

Slide the frame pieces into place.

Make sure the angle brackets slide into the grooves.

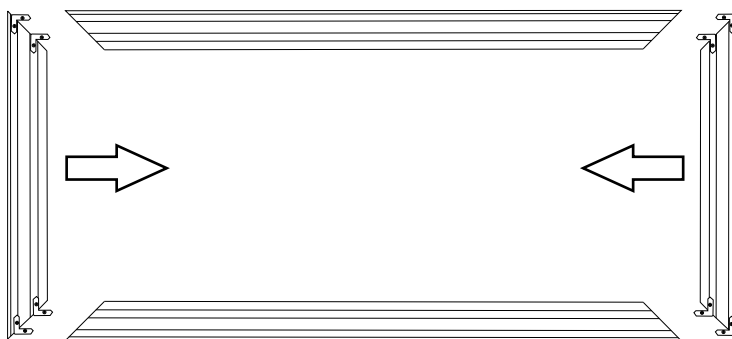

3

Tighten The Angle Brackets


Make sure all four frame piece corners are flush with each other.

Once all four frame pieces are in place, tighten all the angle bracket screws with the included hex key.

There are 16 total screws that need to be tightened.



Note: when lifting and carrying the frame, hold it vertically, not flat.

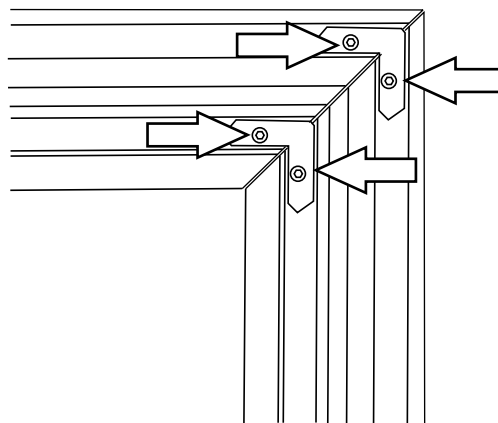


4

Unroll The Fabric

Lay the frame face down.

Unroll the fabric, black side up, onto the frame.


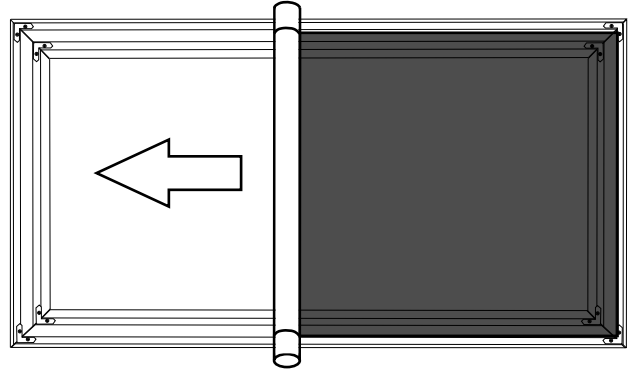


5

Fabric Tuck Review

Before you tuck the fabric, review how the fabric tucks between the frame and the grip rail.

Note the grip rail orientation.

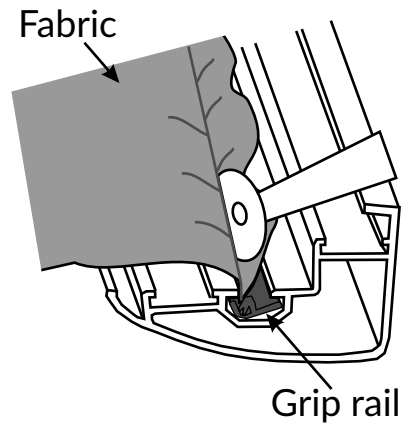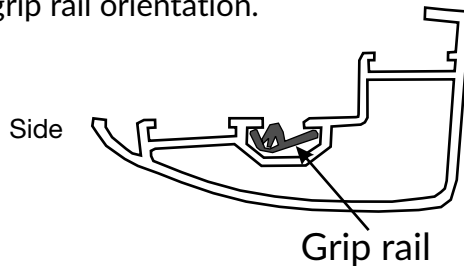

6

Tuck In The Top Left Corner

Using the fabric installation tool, tuck the fabric into the top left corner.



7

Tuck In The Top Right Corner

Tension the fabric with your hand and tuck in the top right corner.



8

Tuck In The Remaining Corners

Tuck in the bottom left and right corners.




9

Tuck In The Sides

Tuck the left side.

Tension the fabric with your hand and tuck in the right side.

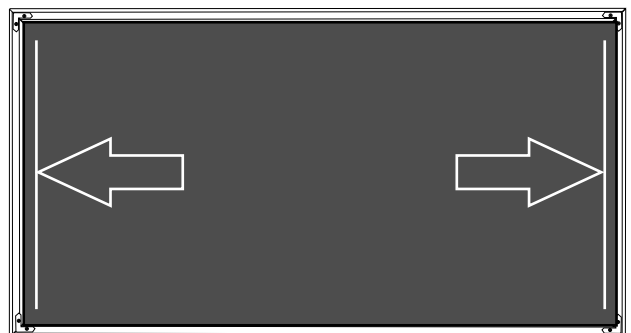


9

Continue Tucking In The Fabric

Tuck the top of the frame.

Tuck the bottom of the frame, while pulling any slack out of the fabric.

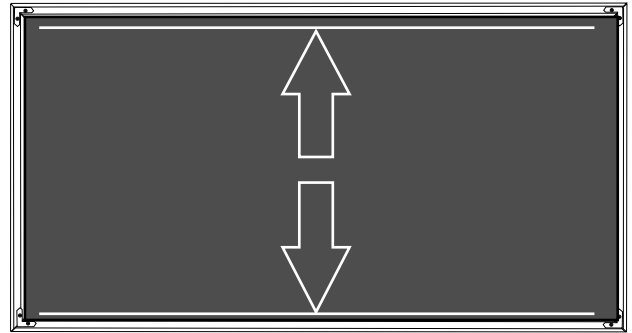


10

Check For Wrinkles

If you find any wrinkles, re-tuck as necessary.

Trim any excess fabric with scissors.

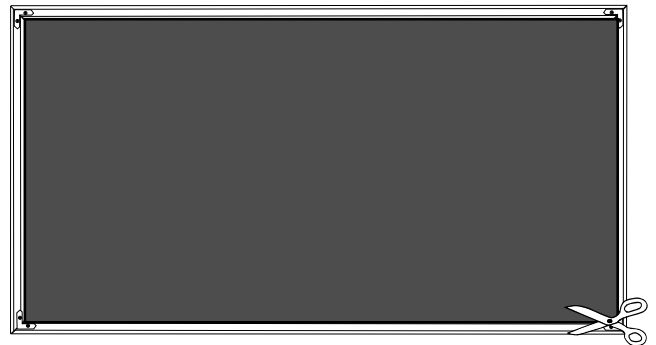

Note: when lifting and carrying the completed screen, hold it vertically, not flat.




12

Attach The Wall Cleat

Attach the cleat to wall studs.

Take care that the cleat is level.

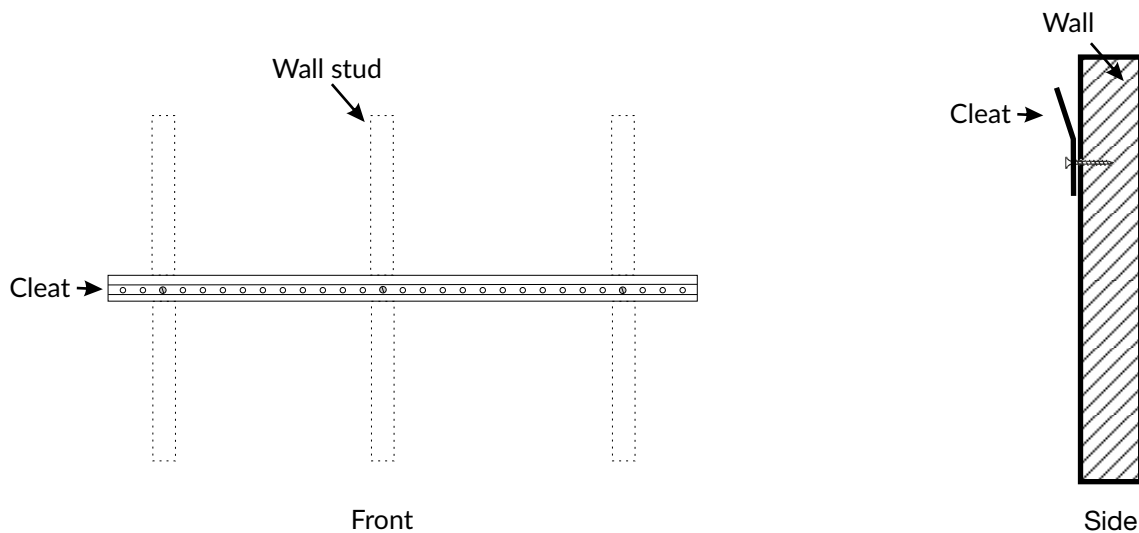

10

Hang The Screen

Hang the screen on the wall cleat.

The screen will be 1/8" higher than the top of the cleat when hung.

